



MORGAN RUSHWORTH DPBM-4 FLOORPLANS

| MODEL | A | B |
|------------------------------|------|------|
| DPBM-4 650mm Bending Length | 700 | 1000 |
| DPBM-4 1050mm Bending Length | 1100 | 1000 |
| DPBM-4 1270mm Bending Length | 1320 | 1000 |
| DPBM-4 1550mm Bending Length | 1600 | 1000 |
| DPBM-4 2050mm Bending Length | 2100 | 1000 |
| DPBM-4 2550mm Bending Length | 2600 | 1000 |

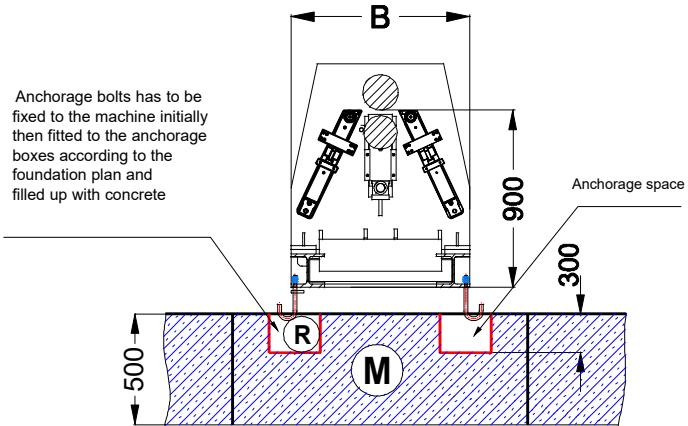


CONCRETE MASONRY

DROP-END

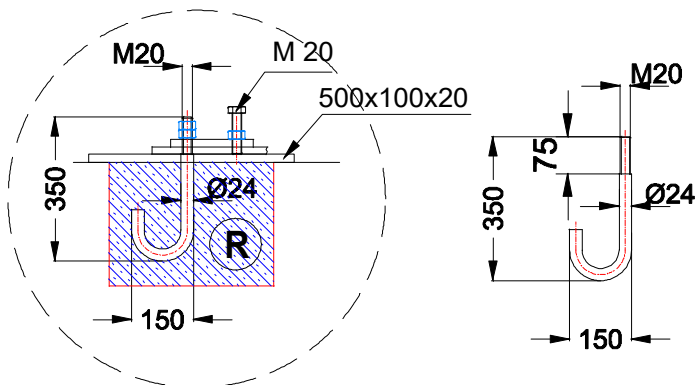

Y DETAIL

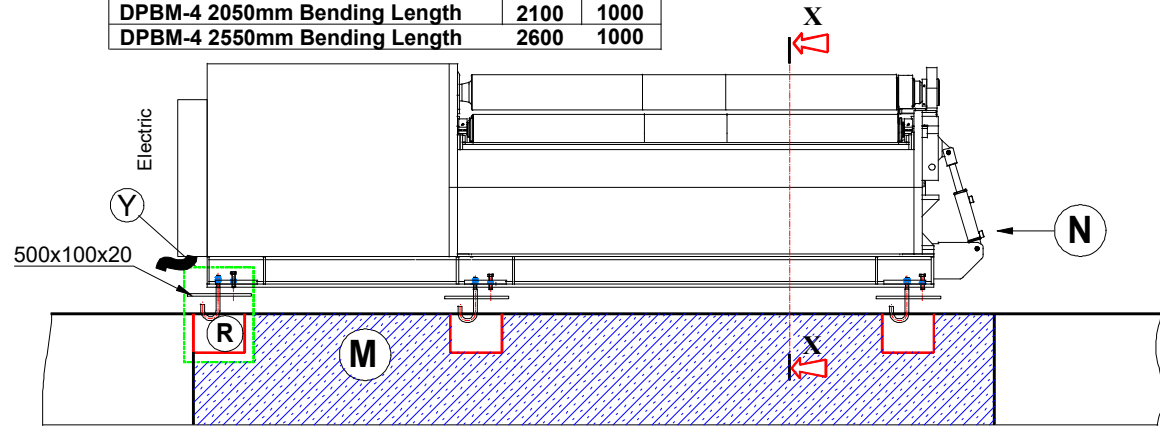

- 1-Make excavation using given measurements.
- 2-On place as shown (M) fill with C 20 Cement .
- 3-After you place machine, fill with C 30 Cement on places shown as (R).

